


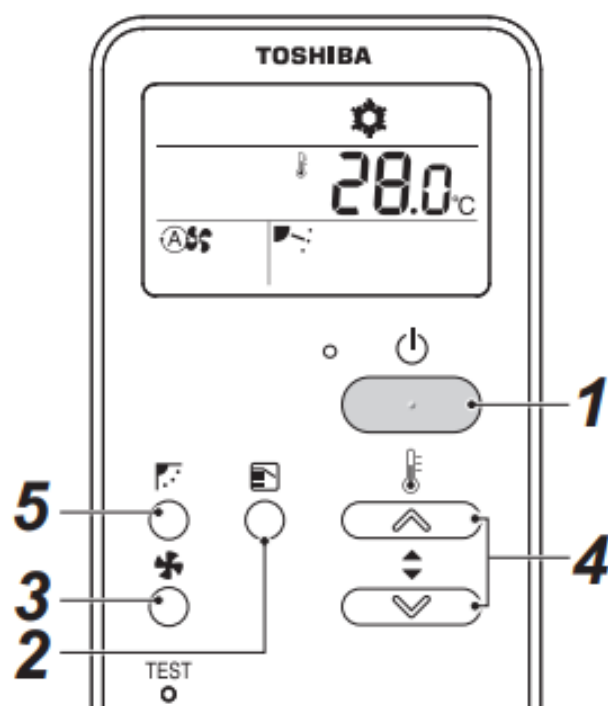

1 ON/OFF button


Push the button to light the operation lamp and start operations.

When heating

- The heated air comes out after a 3 to 5 minutes of pre-heating with the indoor fan kept turned off.

2 Mode select button

Each time you push the button, the operation mode and its icon change in the following order:

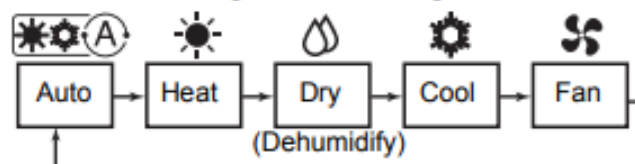


(The indicator on the cooling only models does not show: "Auto" and "Heat")

- For the multi-system, only Super Heat Recovery Multi "Auto" can be displayed and selected.
- With the Concealed Duct High Static Pressure Type, "Dry" is not available.

3 Fan speed button

Each time you push the button, fan speed and its indication change in the following order:

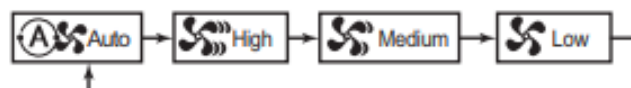

- "Auto" cannot be selected in the Fan mode.
- It becomes "Fix" for the Concealed Duct High Static Pressure Type and other models that cannot select the fan speed, so fan speed is fixed.

4 Temperature setting button

While the room temperature is being shown, push the temperature button to change LCD from to and select the desired set point. The temperature setting range is 18.0 °C to 29.0 °C. The temperature can be set in steps of 0.5 °C.

- LCD shows room temperature 5 seconds after the temperature button was pushed.
- To change the set temperature, push the temperature button again to change LCD to and select the desired set point.
- Contact your dealer for information on how to switch the temperature indicator.

5 Set louver and swing button

- Refer to the Owner's Manual for the indoor unit regarding the set louver and swing button, because there is a slight difference depending on the model of the indoor unit.